

HOW TO START?



FOLLOW INSTRUCTION STEPS. YOU'LL BE ALL SET GO...

STEP 1 MOUNTING THE MINEX

- Wall mount : Easily hook up over wall through backside keyhole.
- Rig chassis mount : Keyhole can be settled in down side angles horizontally
- Rig rack mount : Supports through L-shape bracket
- 19" rack mount : mount with L-shape bracket through cage nuts
- Just put upon any desk



STEP 2 CONNECTIVITY

- Connect 'D' Type three pin power cable with source socket and backside in device.
- Connect a device with LAN Port1 if your LAN segment is same as default IP segment.

If it is different choose to connect a laptop with default LAN segment as given below.

192.168.1.XXX/24 (except: default 110 – Port A)

- You will be able to connect now through browser for first time setup. [Http://192.168.1.110](http://192.168.1.110)
- If you're unable to see any setup wizard on opening above url.
Please check network configuration as mention in example above.
- If you are seeing Setup Wizard in browser. Please follow the instruction to complete setup.
 - Default Credentials : Userid – minex | Password – minex [First Setup / Factory Reset].
 - Finish up setup wizard will reboot the device to complete setup. After restart use your default IP address with 80 port postfix. [eg: <http://10.10.10.110:80>]

STEP 3 ADD RIGS

- Open Assets module from left Menu: Management module



- Click Management



- Auto Discover your Rigs
- Search individual Rig
- Complete Actions option to add Rig in desired Row and Rack.
- Fill up the details regarding your Rig and your Rig is now under MineX monitoring

STEP 4 MANAGE RIGS



Select Rig Monitoring From left Menu

- Go to the rig you want to manage
- Click Dashboard icon (highlighted) to drill down in the Rig Dashboard
- To remove Rig from MineX click [X]
- GPU, Mining operation, Power and Connection method (Automatic detection)

To access remotely over Public Network

- First Setup LAN Port 2 with public IP details from right Menu -> settings.
- Select Port 1 and fill up public static IP details.
- Now device will be accessible through assigned IP and default port 80 [eg: <http://10.10.10.10:80>]

STEP 5 DASHBOARD AND CONSOLE

- Rig Dashboard visualise Rig Health and Stats
- Click Open Terminal to connect securely to your Rig Console.

CONTACT AND SUPPORT

āKüs



- Enquiry: Minex@akus.io
- Tech Support: support@akus.io
- Helpline: India – 1800 309 9987 [Toll Free]
- Visit: www.akus.io
- RMA: 24 Month warranty* www.akus.io/RMA [from the date of purchase]